



VIRTUAL REALITY SOFTWARE INSTALLATION.

MINIMUM SYSTEM REQUIREMENTS.


The following hardware is required to run the Virtual Reality Software:

System Requirements:

- Minimum: Pentium 90 with 16 MB RAM.
- Recommended: Pentium 166MMX with 32 MB RAM, 3D accelerator card with 4 MB Video RAM.
- IBM and 100% compatibles.
- Requires Windows 95 or NT4.
- Double speed CD-ROM drive.
- Microsoft 100% compatible mouse.
- All Windows soundcards supported.
- SVGA graphics card with 512KB VRAM.
- Parallel port is required for security dongle on full software version.

FITTING THE SECURITY DONGLE.

The software will not run without the Security Dongle. Fit the Denford Security Dongle to the parallel port of your computer.

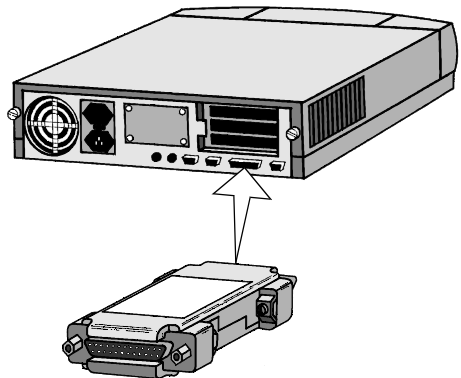

INSTALLATION PROCEDURE.

Follow these instructions to install the Denford Virtual Reality software onto your computer:

- 1) Switch on your computer and start Windows 95 or NT, if required.
- 2) Insert the Denford Virtual Reality CD into your CD-ROM drive. If your CD-ROM is set to autorun, the install program will start - move to section 5). If the install program does not automatically start, continue to section 3).
- 3) Double-click the left mouse button on the "My Computer" icon. In the My Computer window find your CD-ROM drive icon (usually labelled "D:" or "E:") and double-click the left mouse button on this icon.
- 4) The contents of the CD will be displayed in a new window. Double-click the left mouse button on the file named "Setup.exe" to start the installation program.
- 5) Select which Denford Virtual Reality files you wish to install by clicking the buttons of the options you require. Allow the Denford installer to create its own directory, if you have not used any Denford software previously.

Note, the Superscape Visualiser™ software will automatically be installed when VR CIM or VR Robot are selected.

- 6) Restart your computer before trying to run the software for the first time. Ensure that the security dongle is fitted to the parallel port of your computer (see lefthand panel).

TECHNICAL SUPPORT.

Denford Limited provides unlimited Technical Support on this software.

Technical Support is only available to registered users. If your software was not registered with Denford Limited at the point of sale, e-mail or fax your registration details to Denford Limited, or your authorised Denford shipping agent as soon as possible.

When you request Technical Support, please be at your computer, with your computer and software documentation to hand. To minimise delay, please be prepared to provide the following information:

- Dongle Serial Number.
- Registered user's name / company name.
- Software name and version number (found in the lower righthand corner of the VR Linker window).
- The wording of any error messages that appear on your computer screen.
- A list of the steps that were taken to lead up to the problem.

Please contact Denford Limited using the information below:

Denford Limited,
Birds Royd,
Brighouse,
West Yorkshire,
HD6 1 NB,
England.

Tel: +44 (0) 1484 712264.

Fax: +44 (0) 1484 722160.

Email: education@denford.co.uk